


Assembly instruction for sunvisor



Package content:

- | | |
|--------------------------|------------------------------|
| 1. Sunvisor | 1 pcs |
| 2. Front mirror extender | 1 pcs |
| 3. Spacer | 0-9 pcs (depending of model) |


Example: With custom position lights.

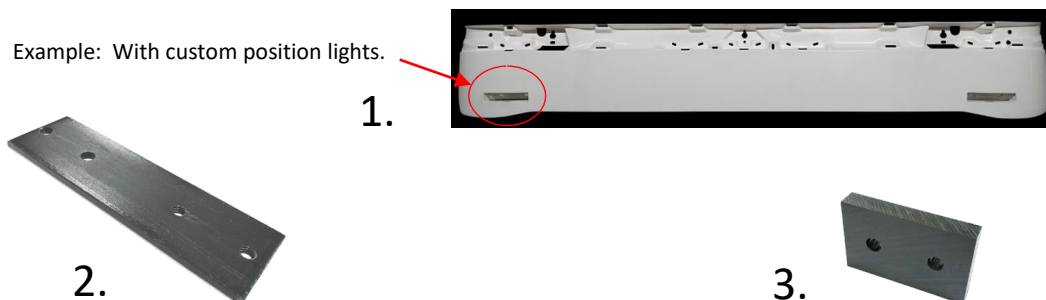

Sunvisor model	Number of spacers
30 cm, 35 cm, 30 cm FLAT, 35 cm BOW without custom position lights	0 pcs
30 cm, 30 cm FLAT, 35 cm BOW with custom position lights	6 pcs
35 cm with custom position lights	9 pcs

Assembly instruction:

1. The sunvisor must be mounted with six M8 screw of suitable length. Where spacers are required, they must be mounted between sunvisor and truck cab. The spacers must be evenly distributed throughout all the three attachment points.
2. Mount the front mirror extender on the front mirror. Use two M8x20, according to picture A.

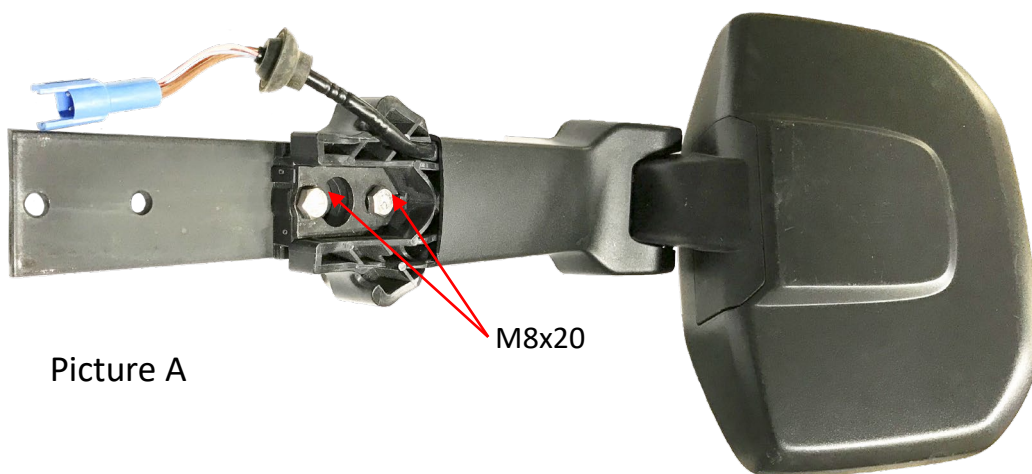

Picture A

3. The mirror unit must be mounted through the opening in the sunvisor, according to picture B.



Picture B

4. If other accessories share attachment points with the sunvisor, make sure there is full alignment between the accessories and the cab wall of the truck. **No gaps are permitted!**
5. If other accessories only use two attachment points, mount an equally thick spacer (not included) on the third attachment point.

All installations should be performed by trained technicians.

WARRANTY DISCLAIMER

Modifications to the product will void warranty.

